



EXTRUDE
HONE®

SHAPING YOUR FUTURE Medical Applications by Extrude Hone



iStock

MAKING THE WORLD SAFER, HEALTHIER & MORE PRODUCTIVE™



EXTRUDE
HONE®

Medical is in Extrude Hone DNA

Designed by us


Extrude Hone has been in business since the 1960's , building on its proprietary technology extrude honing, which has developed into what it is more commonly know as today - Abrasive Flow Machining. Along the way additional technologies have been added to the portfolio offering, all designed specifically to improve the surface finish of your components.

Success for 25 years

We have been processing medical components for over 25 years and have a wealth of experience in providing solutions to healthcare, medical device and pharmaceutical industries. We process FDA and EU cleared devices on our manufacturing sites and understand the complexity and quality requirements related in doing so.



iStock

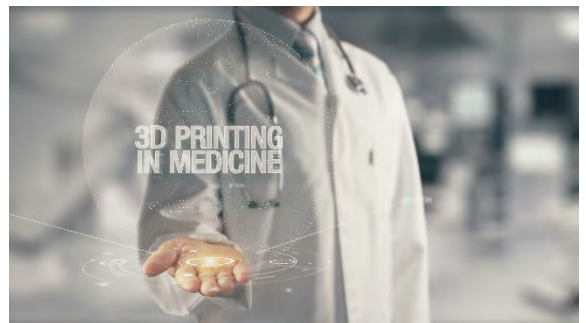

iStock



iStock



EXTRUDE
HONE®

The Applications

Our diverse product range provide solutions to many medical and healthcare fields. Common applications include:


- Knee Femoral and Tibial Trays
- Hip Stems
- Fracture and maxillofacial plates
- Spinal implants
- Heart pump impellers and volutes
- Heart valves
- Biopsy instrumentation and needles
- Surgical Instrumentation – deburring, polishing and additive material removal
- Tube polishing, sourcing and supply for chromatography, pharmaceutical and food processing industries
- ION flow path processing for Mass Spectrometry instrumentation



iStock



iStock

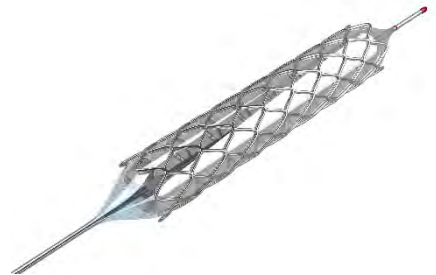

iStock



Surface matters, Finishing Methods as well.

Extrude Hone finishing methods

Depending your finishing requirements, the component geometry, material and the manufacturing process we have solutions for you.

Surface Finishing

Abrasive Flow Machining is the mainstream process already qualified on numerous Medical Devices which are FDA approved, most of them being implantable devices.

MICROFLOW belongs to the same family and it is now available in a high flow variation should be considered if you have small passageways to be polished.

COOLPULSE is a new alternative. COOLPULSE Surface improvement give similar results to that of electropolishing but can focus its machining area and do this without harmful acids. This can also be carried out on titanium alloys (limited grades).

TEM - When required a Thermal Energy Method may be adopted to remove burrs, flashing and unwanted material in milliseconds.

Deburring

From standard deburring to Micro deburring, TEM, AFM and COOLPULSE could be the solution.

Additive structure removal

TEM specific application could be a very productive way to eliminate construction supports.





Cardiovascular Components

Hydrodynamic similarities aid cardiovascular device manufacturers

Cardiovascular components are required to function first time, every time, as patient welfare relies on them. Cardiovascular manufacturers design and manufacture components to ensure that their components benefit rather than harm the patient.

In order to improve the quality and efficiency of their cardiovascular component's manufacturers have introduced abrasive flow machining to improve and maintain consistent functionality.

The fluidic properties of AFM follow a similar path to that of blood, flowing through and around a component whilst smoothing and radiusing the surface. This fluid shaping ensures that the blood flow isn't hindered and that cells are not damaged.

CHALLENGE

- Complex deburring of small hydraulic modules

BENEFITS

- Reduces surface roughness of cannular tubes
- Consistent results guarantee quality
- Fluidic shaping
- Helps prevent damage to blood cells



iStock



EXTRUDE
HONE®

Prosthetics

Guarantee prosthetic functionality with AFM

Prosthetic devices have given patients with reduced mobility the confidence and ability to carry out everyday activities.

Although to the naked eye these can seem simplistic in design, they often incorporate complex hydraulic actuation. The ability to accurately compensate for musculoskeletal changes in natural anatomy and allow the prosthesis to mimic limbs better.

In order to maintain functionality, it is vital that the manufacturing quality of the actuation module is reliable and repeatable.

CHALLENGE

- Complex deburring of small hydraulic modules

BENEFITS

- Repeatable, reliable process
- Reach hard-to-reach areas, even without line-of-sight
- Parts 100% free from burrs



iStock



EXTRUDE
HONE®

Knee Implants

Anatomic restoration made possible using AFM

Restored large joint anatomy allows patients to regain mobility and return to day-to-day activities.

The modern-day knee arthroplasty has remained fundamentally the same since the 1970's, improved by technological advancements in manufacturing, material development as well as implantation approach and accuracy.

During this time Extrude Hone has been called upon to provide surface finishing techniques to both the condyle surface as well as the central box section between the bearing surfaces of the knee femoral.

The uniqueness of Extrude Hone' technology means that you are able to polish areas unachievable by conventional methods. This is prevalent in more modern devices and especially those that are additively manufactured.

To maintain implant functionality it is vital to ensure quality and repeatability of processes. Abrasive flow machining can ensure that the bearing surfaces of the knee femoral meet specifications and guarantee product functionality.

CHALLENGE

- Complex polishing of curved surfaces

BENEFITS

- Repeatable, reliable process
- Reach hard-to-reach areas,
- even without line-of-sight





Spinal Implants

Intricate component deburring using AFM

Back pain is seen as one of the biggest contributors to patient disability worldwide. The main influencer being general wear and tear, sometimes there are more specific cases such as sciatica and disease. As a precursor, occupational therapies like chiropractic adjustment or acupuncture will be used but some cases will eventually require surgical intervention.

The intricacy of these micro machined parts often call for post processing to remove burrs and sharp edges from the implants. In order to mimic the spinal anatomy some implants are designed to allow micro motion. To avoid premature implant wear and failure, contact surfaces designed to move benefit from being post processed by abrasive flow machining. A high-quality surface finish on moving contact surfaces reduce abrasion and improve implant longevity.

To maintain implant functionality it is vital to ensure quality and repeatability of processes. Abrasive Flow Machining can ensure that spinal implants meet specifications and guarantee product functionality.

CHALLENGE

- Complex polishing of micromachined components

BENEFITS

- Repeatable, reliable process
- Reach hard-to-reach areas, even without line-of-sight



iStock



Ion-Block for Mass Spectroscopy machines

High quality surface finish can improve machine accuracy

Mass Spectroscopy machines are used in a wide range of industries but mostly known within the food, drug and medical sectors.

The process takes a solid, liquid or a gas sample and uses electrons to bombard the material to create ions. These ions are then separated within the mass spectroscopy machine and analyzed on a molecular level to understand the makeup of the sample.

With the analyzers the ions are transported using electro or magnetic fields. The flow of ions within the machines pass through many guides, gates and passages to direct the material to the next stage of the process.

Improving the surface finish of components that are in direct contact of the ions improves and smooths out flow, gives more direction and can improve the accuracy of the results.


Extrude Hone abrasive flow machines can polish these complex components to give superior results.

CHALLENGE

- Complex surface polishing

BENEFITS

- Greater accuracy
- Reach hard-to-reach areas, even without line-of-sight

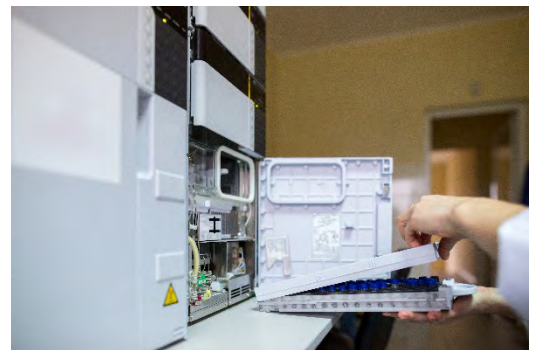

iStock



EXTRUDE
HONE®

Chromatography Tube

HPLC tube solutions for accurate results

High pressure liquid chromatography (HPLC) is used for separating a mixture and quantifying each component within it. Often the process happens within a cannular tube usually referred to as a Column or a Cartridge.

HPLC is used throughout pharmaceutical world as well as analyzing and monitoring glucose levels within the blood.

AFM process is used to polish the internals of the cannular tubes ensuring the accuracy by providing a repeatable micron level surface finish. The smooth, consistent finish achieved by the AFM process improves the separation characteristics of the process and is critical to its function.

CHALLENGE

- Improve surface finish of internal surfaces of the tube for better fluid separation

BENEFITS

- Reduced surfaces roughness of cannular tubes
- Consistent results guarantee quality
- The smooth consistent finish improves the separation characteristics and makes the results clearer



iStock



iStock



Stents

Stents are micro tube structures placed inside blood or other fluids passageway to aid healing or relieve obstruction.

The tubes come in biocompatible material, like 316LVM and cobalt alloys, along with tight dimensional accuracy, very smooth ID – OD and laser cut. They are either balloon inflatable or self-expandable.


Using Abrasive Flow Machining (AFM) as a preliminary tube surface preparation helps paving the way for success following processes like electropolishing.

CHALLENGE

- Achieve efficient internal surface improvement

BENEFITS

- Reduced surfaces roughness of cannular tubes
- Consistent results guarantee quality

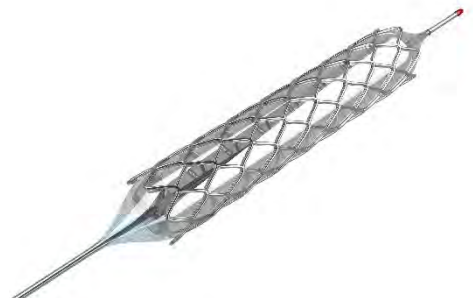

iStock



iStock



Medical Tubing

High quality tubing supplied and finished by Extrude Hone

Healthcare, pharmaceutical and medical device industries require tubing that is superior to what most suppliers can offer. In some cases tubing may need to be specifically manufactured at the mill especially when seamless tubes are required. Once the raw material is obtained some manufacturers have internal surface finish requirements that is sometimes only achievable using Extrude Hone processes.

Extrude Hone has over 25 years of experience in processing tubing for high spec applications and pride ourselves in often being the only point of call in internal tube processing. Not only this but Extrude Hone work directly with tubing manufacturers and can supply your specific requirements straight from the mill, post process to your required internal Ra, clean, pack and ship to your door.

Some of the tubing applications that we supply are used to manufacture Stents, Chromatography tubes, Surgical Instruments for Ophthalmic and Biopsy industries, Food preparation, Pharmaceutical processing and many more.

The surface finish requirements of each application varies but we are able to supply internal polishing down to 0.6um Ra and over a length of up to 500mm.

CHALLENGE

- Complex polishing

BENEFITS

- Repeatable, reliable process
- Reach hard-to-reach areas, even without line-of-sight



iStock



EXTRUDE
HONE®

Surgical Instrumentation

Instruments are often thought of as simple disposable devices used every day in surgery such as a scissors or a scalpel. Although simple disposable instruments are used in most cases, they make up less than 5% of the total number of instruments used for example in a Hip or Knee instrument set.

These more complex instruments are specifically designed to function with the corresponding hip or knee replacement. The quality and reliability of the instrument is just as important as the implant as one cannot function without the other. An instrument malfunction could also lead to an increase operating time, which is sometimes a reportable event.

COOLPULSE™ can be used to improve the surface finish of instrumentation, reducing surface roughness and removing stress risers. It can also be used to smooth sharp edges as well as remove burrs to ensure the sterility of the instrument is retained.

CHALLENGE

- Remove burrs and sharp edges
- Ensure sterility of implants
- Improve mechanical properties by removing stress – risers

BENEFITS

- Increased device reliability
- Reduced risk of unsterile components
- Reliable and repeatable finishing
- Capable of internal and external features even on complex geometries



iStock



Proximal Fracture Plate

Burr removal and edge finishing solution for an implantable device

Implantable devices have changed the face of the healthcare industry since their introduction in the 1950's.

Device quality is paramount as these devices are clinically invasive and patients often rely on them for mobility and sometimes even as a life support. Most implantable metallic devices are manufactured from grades of Titanium or Stainless Steel due to their corrosion resistance and biocompatibility.

Some medical devices are intricately shaped due to their location, which increases the complexity when it comes to edge finishing. Manufacturing processes leave behind unwanted burrs and sharp edges that can negatively impact the mechanical properties of components leading to reliability issues during the product's life cycle. In addition, the sterility of implantable devices may be compromised if there are sharp edges on the device.

Extrude Hone's Abrasive Flow Machining removes burrs and sharp edges from internal and external features which will improve the quality of implantable medical devices.

CHALLENGE

- Remove burrs and sharp edges
- Ensure sterility of implants
- Improve mechanical properties by removing stress – risers

BENEFITS

- Increased device reliability
- Reduced risk of unsterile components
- Reliable and repeatable finishing
- Capable of internal and external features even on complex geometries





Tablet Press Tooling

Pills are critical in nowadays' s medicine. Get the Tablet Press Tooling right is key to get the pill itself right and the best productive manufacturing. A Pill press down is a hard pill to swallow as you know.

Abrasive Flow Machining is one process use to achieve the superior surface finishing on the punch press barrel extremity and in the dies passage.

Depending on the application and on the treating and coating AFM will be used or not.

Same for the manufacturing of the punch die shape itself, PECM (Precise Electrochemical Machining) could be used if conventional machining reach a limit.

CHALLENGE

- Surface Super finish
- Demanding tolerances

BENEFITS

- Perfect product shaping
- Reliable and repeatable finishing
- Capable of internal and external features even on complex geometries



Source: Natoli Engineering



EXTRUDE
HONE®

Ball Screws for Medical Beds

For most of us a Medical Bed is not that much than a fancy expensive bed till we must rest in it.

Medical beds can be very high tech as including connectors for fluids, protocol reminder with multiple HMI, WIFI capabilities and fully electric motion at a fingertip including possibility to move the patient from horizontal to vertical position.

Medical bed smooth motion is part of the comfort of the patient who are already in deep pain. The ability to adjust the height of the bed to facilitate moving patient in and out the bed is a great support for nurses who do this hundred times a day.

Looking specifically at motion, ball screws are used to ensure electric powered smooth motion. Cleanliness of a ball screw is critical to ensure absence of failure, smooth motion and no wear.

ECM process are applied to the thread section of the ball screws but also the nut. Extremity of the thread, and nut recirculation intersection areas must be micro-burrs free Nice radius could be added to improve quality even further.

CHALLENGE

- Surface Super finish and radius generation
- Demanding tolerances

BENEFITS

- Perfect product shaping
- Reliable and repeatable finishing
- High productivity for controlled cost



iStock



EXTRUDE
HONE®

Finishing Ventilator components

As we all know, ventilators have been on high demand during Coronavirus COVID-19 outbreak.

Some of the intricate components in contact with the fluids require to be perfectly clean.

TEM process is used to remove burrs and micro-burrs from parts. This was the process of choice to ensure that no contaminants are left in this critical ventilator component. Some of them have multiple cross hole intersections with thread. TEM is removing not only burrs from the machining operation but also any particle left.

As Thermal Deburring comes with a high productivity, cycle time being seconds, Extrude Hone was able to ramp up drastically TEM finishing production to respond immediately to the high demand on ventilators.

CHALLENGE

- Surface Super finish and radius generation
- Demanding tolerances

BENEFITS

- Perfect product shaping
- Reliable and repeatable finishing
- High productivity for controlled cost



iStock



EXTRUDE
HONE®

Additive in Medical - The Bigger Picture

Additive manufacturing has taken the industry by storm, once complicated multi piece or multiple operation components can now be created in one step. The drawback of which is that components that require a high-quality surface finish or precision features need additional operations to machine and finish the part. In addition, the build process can also leave support structures that need to be removed prior to machining and leave behind partly sintered or partially bonded powder material on the surfaces.

This scenario is particularly unwelcome in the implantable medical device and instrumentation space. Rough, as printed surfaces could trap contaminants on the surface of the part. Unwanted free movement of particles that have become unbonded from the surface can cause huge complications within the body. Loose metallic particles could cause implants to be rejected by the body, cause infection and require revision surgery. Instruments that are used to position the devices also fall under this category as these are often used within the incision.

CHALLENGE

- Surface finish requirements for additively manufactured medical components

BENEFITS

- Removal of partially sintered or bonded material
- Support structure removal
- Smooth surfaces reduce harboring of bacteria





EXTRUDE
HONE®

Additive finishing techniques

What's the best technology for finishing of AM Medical parts?

There is no universal answer to this question. There are many challenges, which differ from part to part. Sometimes components are less complex in shape and can be finished using more conventional techniques. Others are near net printed and conventionally machined to achieve the desired finish. However, when developing a true additive part, typically having been through a design for additive manufacture (DFAM) process, component features may not be reachable using conventional methods. Extrude Hone realizes this and has developed techniques using Abrasive Flow Machining (AFM) for internal channels, as well as non-contact electrochemical COOLPULSE for both internal and external finishing of additive components. Both techniques have been independently documented as exemplary methods of removing partially-sintered and bonded material from the surface.

CHALLENGE

- Surface finish requirements for additively manufactured medical components

BENEFITS

- Removal of partially sintered or bonded material
- Support structure removal
- Smooth surfaces reduce harboring of bacteria



iStock





EXTRUDE
HONE®

Equipment or Contract Shop, your pick

Extrude Hone supports customer in the Medical fields in various ways:

Feasibility – Testing

- Test different technologies or a combination to find the perfect solution that suits their needs
- Test structure removal using TEM - different structures require different approaches.

Contract shops

- No need to invest - we have contract shops that can do the job for you, some process FDA approved devices like in Irwin PA.
- Leverage finish3D capabilities a combination of Extrude Hone processes with MMP technology

Equipment

- Want to keep the process a secret, bring machines to your location
- The full equipment portfolio is for sale. We will support during ramp-up and we will be beside you for service and consumables in the long term.





EXTRUDE
HONE®

Industry Experience

Linx, Blatchford's integrated limb system, is designed to deliver an experience that mimics the incredible and complex structure of the human leg compromising a knee and foot/ankle joint. It provides a coordinated stream of instructions to the hydraulic and pneumatic support system by actively sensing and analyzing data on the user's movement, activity, environment and terrain. The result is a walking experience that is closer to nature than ever before, giving the user the confidence to get on with their life.

Blatchford's Manufacturing Department, based in Basingstoke, has an Extrude Hone EASYFLOW machine, an Abrasive Flow Machining (AFM) system, which deburrs the intersecting passages to ensure a smooth flow of hydraulic fluid in their Orion3, microprocessor-controlled knee (MPK), and Linx to provide the user with smooth joint function.


Ian Keeley, Manufacturing Engineering Manager at Blatchford, commented:

"We purchased the system to give increased control over the process and the lead-time. Since bringing this in house, we have reduced the overall lead-time by around 20%. It has also given us the ability to experiment with this process on other components – something not so easily done when the process is outsourced."



The machine removes the human element of the internal deburring and gives consistent material removal, a quality that is essential for Blatchford and their medical devices.



Source: Blatchford

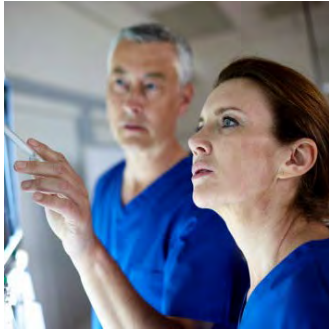

EXTRUDE HONE®
SHAPING YOUR FUTURE

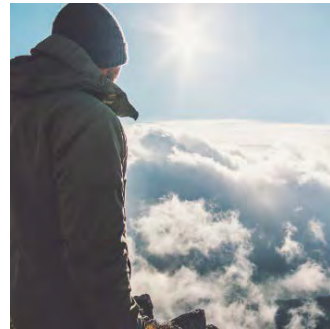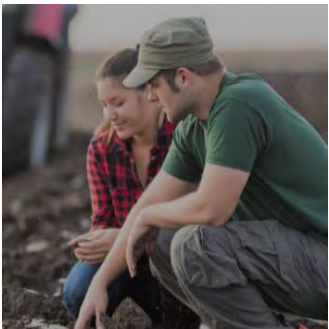

MADISON®
INDUSTRIES